

## Manually Set IP Address


To manually set the IP address:

1. Disconnect your computer from your Local Area Network (LAN).
2. Select **Start > Control Panel**.




**Figure 1: Control Panel**

The Adjust your computer's settings window displays.

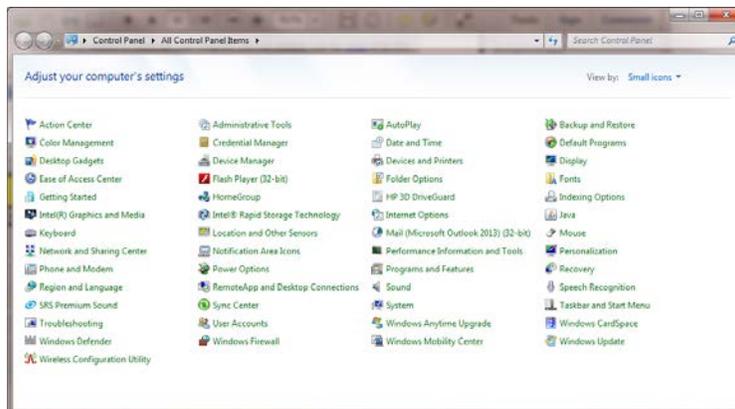

**Figure 2: Adjust Computer Settings**


3. Select **Network and Sharing Center**.

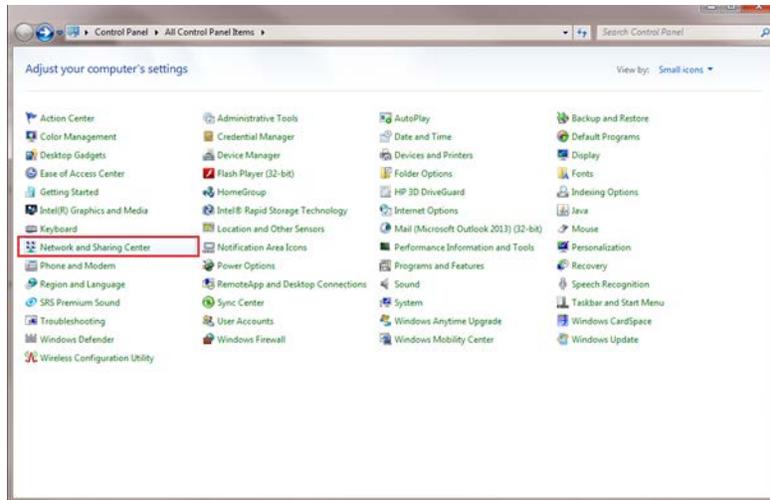

**Figure 3: Network and Sharing Center**

The Control Panel Home window displays.

- 4. Select **Change adapter settings**.

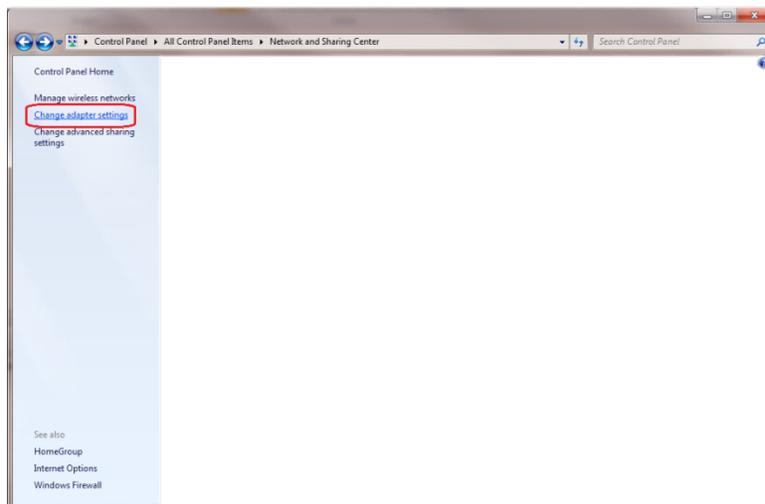

**Figure 4: Change Adapter Settings**

The Network Connections window displays.




**Figure 5: Network Connections Window**

- 5. Double-click **Local Area Connection**.




**Figure 6: Local Area Connection**

The Local Area Connection Status General tab dialog box displays.

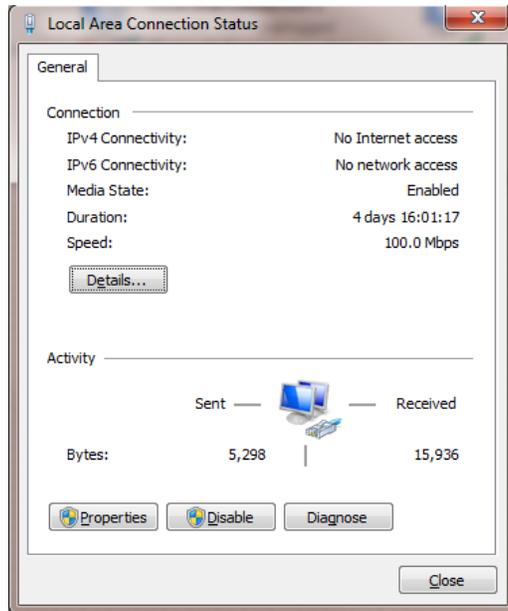


**Figure 7: Local Area Connection Status – General Tab**

6. Double-click **Properties**.

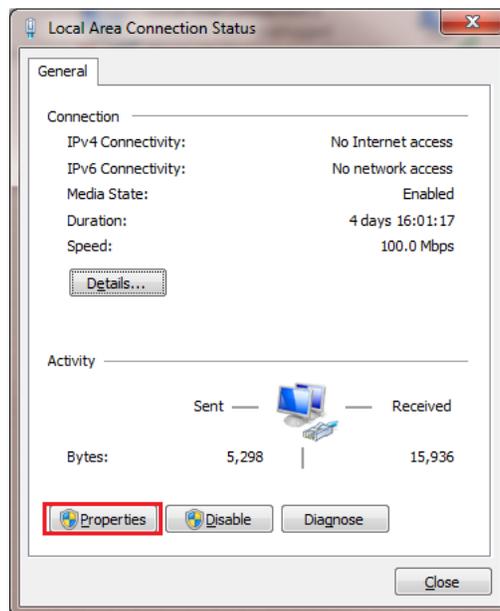


**Figure 8: Local Area Connection Properties – Properties**

The Local Area Connection Properties dialog displays.

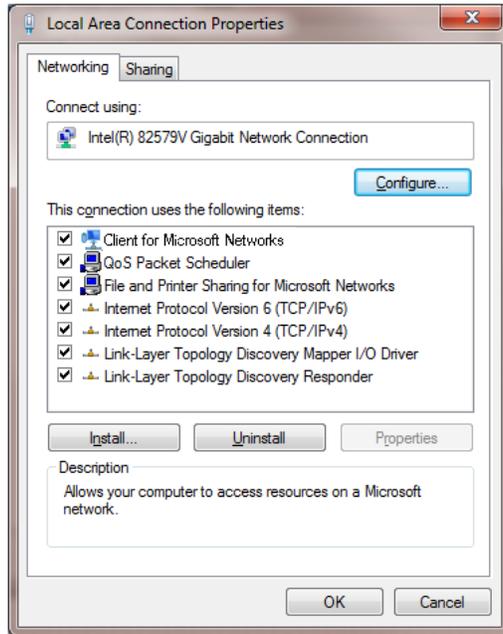

**Figure 9: Local Area Connection Properties – Networking Tab**

7. Double-click **Internet Protocol Version 4 (TCP/IPv4)**.

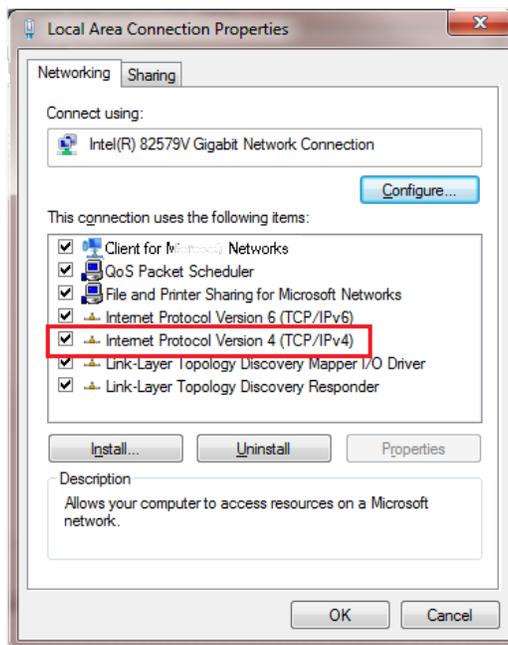


**Figure 10: Local Area Connection Properties – Networking Tab – Internet Protocol**

The Internet Protocol Version (TCP/IPv4) Properties dialog box displays.




**Figure 11: Internet Protocol Version 4 (TCP/IPv4) Properties – General Tab**

8. Select **Use the following IP address:**

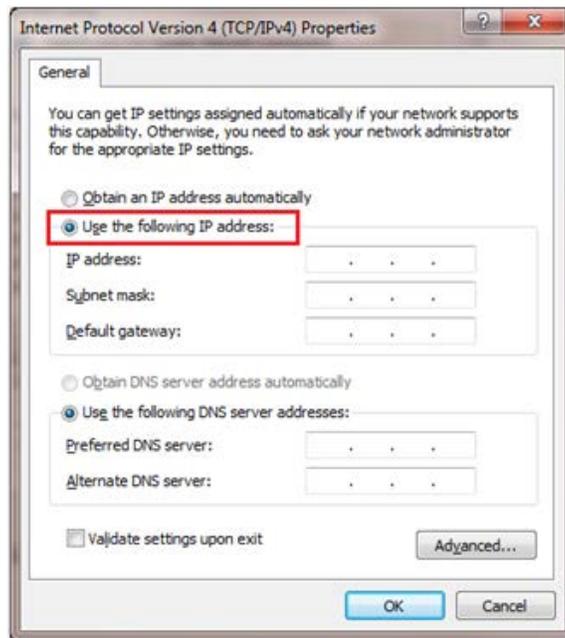

**Figure 12: Use the Following IP Address**

9. Enter 192.168.1.100 and a subnet of 255.255.255.0.

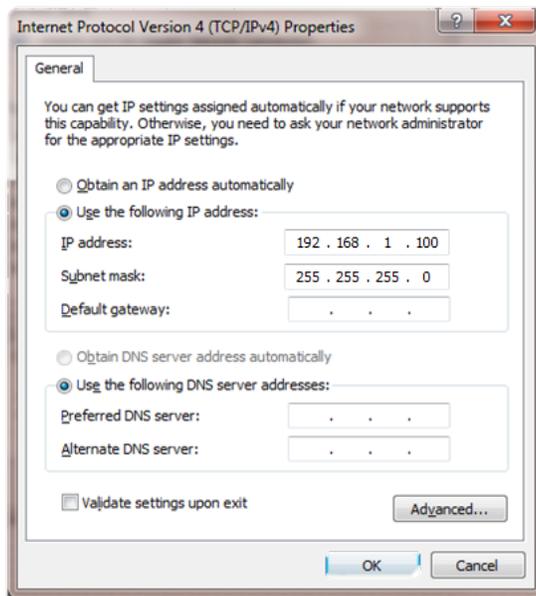

**Figure 13: New IP Address**

10. Click **OK**. The Internet Protocol Version 4 dialog box closes.
11. Click **OK**. The Local Area Connection Properties dialog box closes.
12. Click **Close**. The Local Area Connection Status dialog box closes